

11.1 Product fiche according to regulation EU No. 1061/2010

| Trade mark | Haier | | |
|---|-------------------------------|---------------------------------|---------------------------------|
| Model identifier | HWD80-B14979 HWD80-B14979S | HWD100-B14979 HWD100-B14979S | HWD120-B14979 HWD120-B14979S |
| Energy efficiency class ¹⁾ | A | A | A |
| Energy consumption for washing, spinning and drying using the standard cotton programmes ²⁾ in kW·h/complete operating cycle ³⁾ | 5.43 | 6.8 | 7.9 |
| Energy consumption for washing, spinning using the standard cotton washing programmes ²⁾ in kW·h/washing cycle ³⁾ | 0.91 | 0.9 | 1.15 |
| Washing performance class ¹⁾ | A | A | A |
| Water remaining after spin for standard 60 °C cotton washing cycle ²⁾ in % | 46 | 52 | 43 |
| Maximum spin speed for standard 60 °C cotton washing cycle ²⁾ in rpm | 1370 | 1390 | 1400 |
| Washing capacity for standard 60 °C cotton washing cycle (without drying) ²⁾ in kg. | 8 | 10 | 12 |
| Drying capacity for standard "dry cotton" drying cycle ²⁾ in kg. | 5 | 6 | 8 |
| Water consumption for washing, spinning and drying ²⁾ in L/complete operating cycle. | 100 | 114 | 122 |
| Water consumption for washing, spinning only ²⁾ in L/complete operating cycle. | 57 | 62 | 65 |
| Washing and drying time. Programme time for complete operating cycle in min. | 675 | 715 | 685 |
| Estimated annual consumption for a four-person household, always using the drier (200 cycles) in kW·h. | 1086 | 1360 | 1580 |
| Estimated annual consumption for a four-person household, never using the drier (200 cycles) in kW·h. | 182 | 180 | 230 |
| Noise during washing, spinning and drying cycles using the standard cotton programme ²⁾ in dB(A) re 1pW | 55/73/63 | 55/72/61 | 53/72/59 |

¹⁾ Class G is the least efficient and Class A is the most efficient.

²⁾ Enter the European standard test procedure :

Washing: Select Eco 40-60, often touch speed for 5 seconds. After the temperature function is displayed, select the temperature and the maximum speed, touch Start button.

Drying: Select Eco 40-60, often touch speed for 5 seconds. After the temperature function is displayed, select Dry programme, often touch Dry Level for 5 seconds, then display "dr 5", touch Start button.

³⁾ Actual energy consumption per cycle will depend on how the appliance is used.