




Russell Hobbs

Built Under 60cm Wide
Larder Fridge
Instruction Manual

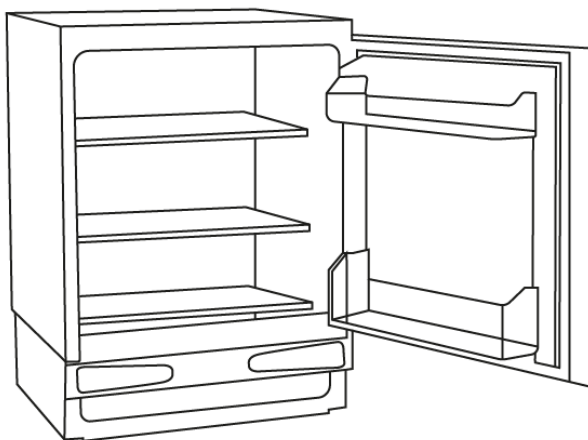

Model number(s):
RH82BULF1E1W

IMPORTANT:
RETAIN FOR FUTURE REFERENCE

Contents

| | |
|--|---------|
| Safety Instructions | 3-5 |
| Electrical Safety | 5 |
| Transportation & Handling | 5 |
| Installing & Switching on your Appliance | 6-7 |
| Before Switching On | 7 |
| Product Overview | 8 |
| Unit | 8 |
| Usage | 9-10 |
| Temperature Selection | 9-10 |
| Installation | 11 - 21 |
| Fitting the Plinth | 22 |
| Door Reversal | 23 - 25 |
| Replacing the Light | 26 |
| Energy Saving Advice | 27 |
| Food Storage Advice | 27 |
| Maintenance & Cleaning | 28 |
| Internal Cleaning | 28 |
| External Cleaning | 28 |
| When the appliance is not in Use | 28 |
| Trouble Shooting | 29-30 |
| Connection to the Mains Supply | 31 |
| Guarantee | 32 |
| Technical Specification | 33 |
| Product Fiche | 34 |
| Notes | 35 |

Safety Instructions

Important note: Please read this booklet before installing and switching on this appliance. The manufacturer assumes no responsibility for incorrect installation and usage as described in this booklet.



Warning: When positioning the appliance, ensure the supply cord is not trapped or damaged.



Warning: Do not locate multiple portable socket-outlets or portable power suppliers at the rear of the appliance.

- This model uses natural refrigerant gas as part of its cooling system. This gas is known as R600a (Isobutene) and is environmentally friendly but can be combustible. Care should therefore be taken when handling or transporting the product to ensure that none of the refrigeration circuit components are damaged,
- Do not obstruct ventilation openings in the appliance
- The appliance must not be placed or rested on its power cord.
- Do not use mechanical devices or other artificial means to accelerate the defrosting process, such as a heater or a hair dryer.
- Do not use electrical appliances in the refrigerator compartment of the appliance.
- If this appliance is to replace an old refrigerator with a lock, the lock must be removed as a safety measure before storing it or disposing of it. This is to protect children from locking themselves inside the appliance.
- Old refrigerators and freezers contain insulation gases and refrigerant, they must be disposed of properly. Contact your local authority or your dealer if you have any questions. Please ensure that you do not damage the scrap unit prior to being picked-up by the relevant waste disposal service.
- Do not use adaptors or extension leads when connecting the appliance to the electrical power supply

- Do not plug in damaged plugs.
- Do not pull, twist or damage the power cable.
- Do not plug-in or un-plug the appliance with wet hands to prevent electrical shock.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance.
- Children aged from 3 to 8 years are allowed to load and unload this appliance.
- This appliance is designed to be used by adults, do not allow children to play with the appliance or let them hang over the door.
- Do not place explosive or flammable material in your appliance for your own safety.
- Bottles containing a high percentage of alcohol must be sealed well and placed vertically in the refrigerator.
- Do not cover the body or the top of the appliance
- Fix down the accessories in the appliance during transportation to prevent damage to them.
- To avoid contamination of food, please respect the following instructions
 - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
 - Clean regularly surfaces that can come in contact with food and accessible drainage systems.
 - Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
 - Two-star frozen-food compartments(if they are presented in the appliance) are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.

- One-, two- and three -star compartments (if they are presented in the appliance) are not suitable for the freezing of fresh food.
- If the appliance is left empty for long periods, switch off, defrost, clean, dry and leave the door open to prevent mould developing within the appliance.

Electrical Safety

THIS APPLIANCE MUST BE PLUGGED INTO AN EARTHED SOCKET

- Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This product is designed to operate on 220 – 240V AC; 50Hz. Connection to any other power source may damage the unit.
- This product may be fitted with a non re-wireable plug. If it is necessary to change the fuse in the plug, the fuse cover must be refitted. If the fuse cover becomes lost or damaged, the plug must not be used until a suitable replacement is obtained.
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged in any way, it should be cut off and an appropriate plug fitted following the wiring instructions. This should be carried out by a qualified electrician. The plug removed must be disposed of safely, as insertion into a 13 Amp socket is likely to cause an electrical hazard.

Transportation and Handling

For safe lifting, tilt the appliance backwards by no more than 45 degrees, hold the base and rear corners of cabinet. Lift the refrigerator carefully. Never use the door handles for lifting. To move the refrigerator on a flat level surface, tilt it slightly backwards and push backwards.

This unit is heavy and could cause injury – ensure there are adequate people present to move the appliance.

Installing and Switching on Your Appliance

- Operating voltage for your appliance is 220-240V at 50Hz.
- Before plugging in the power supply, ensure that the voltage on the rating label corresponds to the working voltage of your electrical system in your home.
- Insert the plug into an efficient Ground (Earth) connection. If the socket has no Ground (Earth) contact or the plug does not match, we suggest you call an authorised electrician for assistance.
- Place your appliance in an area that is not exposed to direct sunlight.
- Your appliance should be placed at least 10cm away from stoves, ovens and other heating cores.
- This appliance should never be used outdoors or left in the rain.
- When your appliance is placed next to a chest freezer or freezer, there should be at least 10cms between them to prevent humidity on the outer surface.
- Do not place anything on your appliance and install the unit in a suitable place so that there is at least 30cm clearance above the appliance.
- If placing your appliance next to kitchen cabinets, leave 5cm between them.
- The rear of the appliance should be at least 6cm away from the back wall.
- The appliance must be used in the vertical position and on a flat surface.
- To level the appliance, use the adjustable feet on the appliance.
- Do not place your appliance on a carpeted surface as this will prevent adequate ventilation.
- This appliance should only be placed on a flat, firm surface.
- Choose a dry and well-ventilated space.
- The appliance should be positioned so that the plug is easily accessible.
- This appliance is not suitable for use in garages, outbuildings or rooms that do not comply with the ambient temperature requirements set out in the Product Fiche.




! WARNING! During use, service and disposal of the appliance, please pay attention to symbol similar to the one shown, which is located on rear of the appliance (rear panel or compressor) and with a yellow or orange colour. It's risk of fire warning symbol. There are flammable materials in refrigerant pipes and compressor. Please be far away from fire source during use, service and disposal.

Before Switching On

- Before using your appliance, add a teaspoon of bicarbonate of soda to warm water and with a damp cloth wipe down all parts of the new appliance, then repeat the process with a clean damp cloth and dry. **(ensure the appliance is not connected to the power when performing this task).**
- Remove all transport tapes and foam protection pieces . Clean the interior with a cloth dampened in lukewarm soap and water. Wipe with clean water and wipe dry.
- There may be an odour when you first switch on the appliance, it will disappear when the appliance starts to cool.
- When the appliance has been positioned, adjust the feet to ensure the unit is stable. This is essential to ensure quiet running and proper door opening /closing.
- Connect to the electrical socket but do not switch the power to the refrigerator on for at least 3 hours. The coolant within the product needs time to settle after it has been transported and put in to position, failure to do this will affect the cooling performance of your appliance.
- Once the appliance has settled, locate the thermostat dial on the product and set to "4" and switch on the power. The compressor will begin to work. Close the door.
- You may hear faint gurgling or bubbling sounds when the refrigerant is pumped to the cooling system and through the coils or tubing at the rear of the appliance. When the compressor is in operation you may hear a slight whirring sound or pulsating noise. The thermostat controls the operation of the compressor, and you may hear a slight click as it cycles in and out (this is normal).
- To save energy, you should minimize the frequency and duration of door opening.

Product Overview

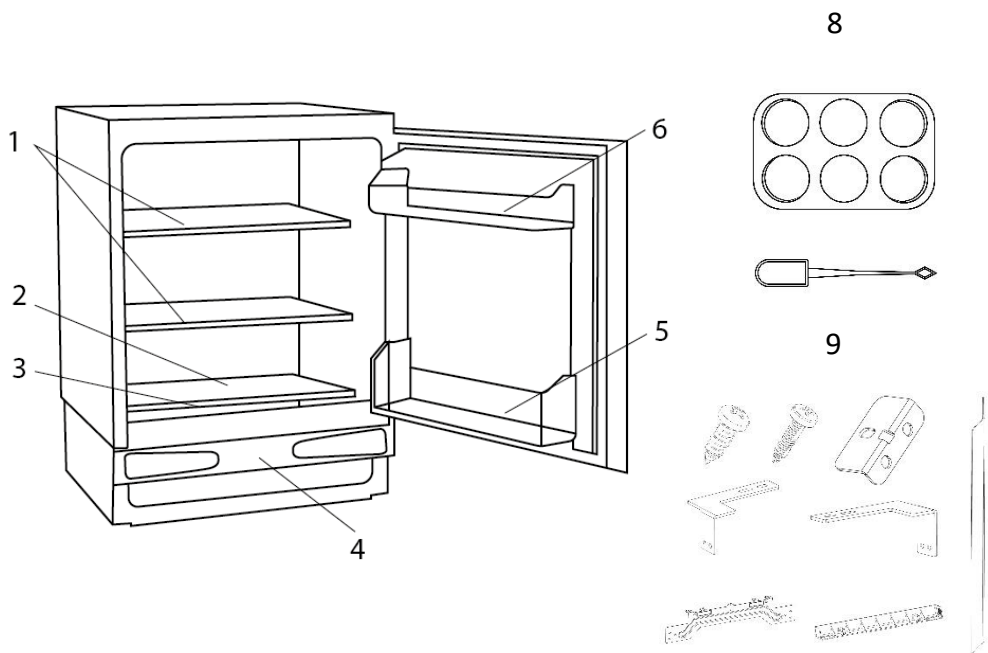


- | | | | |
|----|------------------------|----|-----------------------------------|
| 1. | Light & thermostat | 6. | Adjustable feet |
| 2. | Adjustable shelves | 7. | Door racks |
| 3. | Drainage hole | 8. | 1 x egg tray & drainage hole plug |
| 4. | Non-adjustable shelf | 9. | Installation accessories |
| 5. | Crispers (under shelf) | | |

Usage

! Allow to stand for a minimum of 3 hours before plugging in to the mains

The temperature in the appliance is controlled by the temperature control dial or thermostat located inside the fridge. Rotate the control dial up or down to regulate the temperature inside the fridge.

On the temperature control dial, ● is the off setting, 1 is the warmest setting and 5 is the coldest setting. **Under normal conditions for a product used in the majority of UK homes the temperature control should be set between setting 3 and 4.**

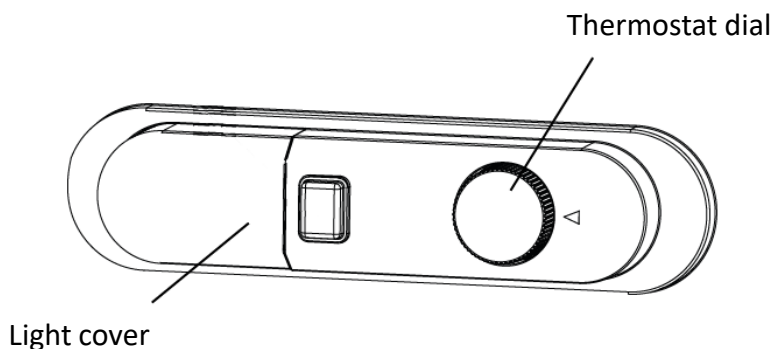

Depending on the ambient temperature of the room the appliance is situated in, you may need to adjust the temperature control dial; in a room with a high ambient temperature (summer) the temperature control dial may need to be adjusted to a colder setting (moved to setting 4 or 5) or in a room with a low ambient (winter) temperature the temperature control dial may need to be adjusted to a warmer setting (moved to setting 2).

Setting the temperature control dial to setting 5 should be used as a rapid cool setting and should only be set for 2 hours before a large amount of food is placed in the fridge. The temperature control should be put back to setting 3 after the food has been placed in the fridge, if this is not done the temperature in the fridge compartment could fall below 0°C as the compressor will run continuously.

Usage


! Allow to stand for a minimum of 3 hours before plugging in to the mains

Note: The standard operating temperature for the fridge compartment should be between 0°C and 4°C.

Note: The temperature of the freshly stored food and how often the door is opened affects the temperature in the refrigerator compartment. If required, change the temperature setting.

Installation


- This appliance can be installed as a built under unit only. The clearances shown in the below drawing must be followed.
- Avoid damaging the product during installation, positioning of the appliance requires two people in order to avoid injuries or damage to the appliance.
- Your appliance should not be located in direct sunlight or exposed to continuous heat or extremes of temperature (e.g. next to a radiator or boiler). If this is not feasible, then you should install an insulation plate between the appliance and the adjacent heat source.
- You should check whether there is an electrical socket available, which will be accessible after your appliance is installed.
- Place the appliance flatly and firmly on a solid base
- Be sure to leave enough space for the opening of the door, to avoid damage to the appliance or personal injury
- The aperture size has to be a minimum of (H)820 x (W)600 x (D)550mm.
- Tools Required: Torx headed screwdriver, flat headed screwdriver, pencil, right angle measure, ruler, drill, span, hexagonal spanner or a socket driver and spirit level.

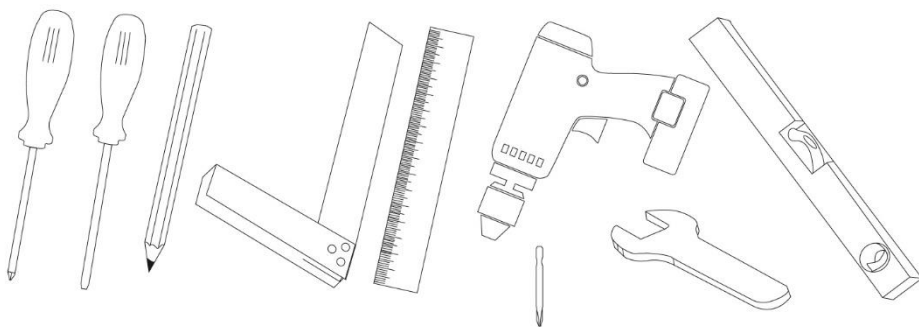

Installation


- The accessories that are required for installation are detailed below:

1. Torx Screw (short)
2. Torx Screw (long)
3. L bracket (door)
4. Fixing bracket
5. Decorative cover
6. Left cabinet L bracket
7. Right cabinet L bracket
8. Joint cover

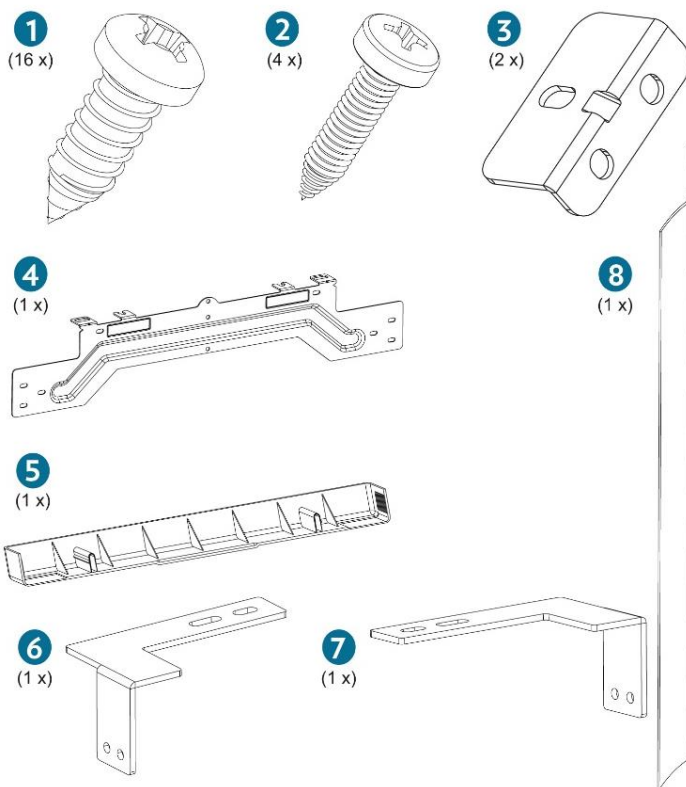

Installation


The aperture size has to be a minimum of (H)820 x (W)600 x (D)550mm.

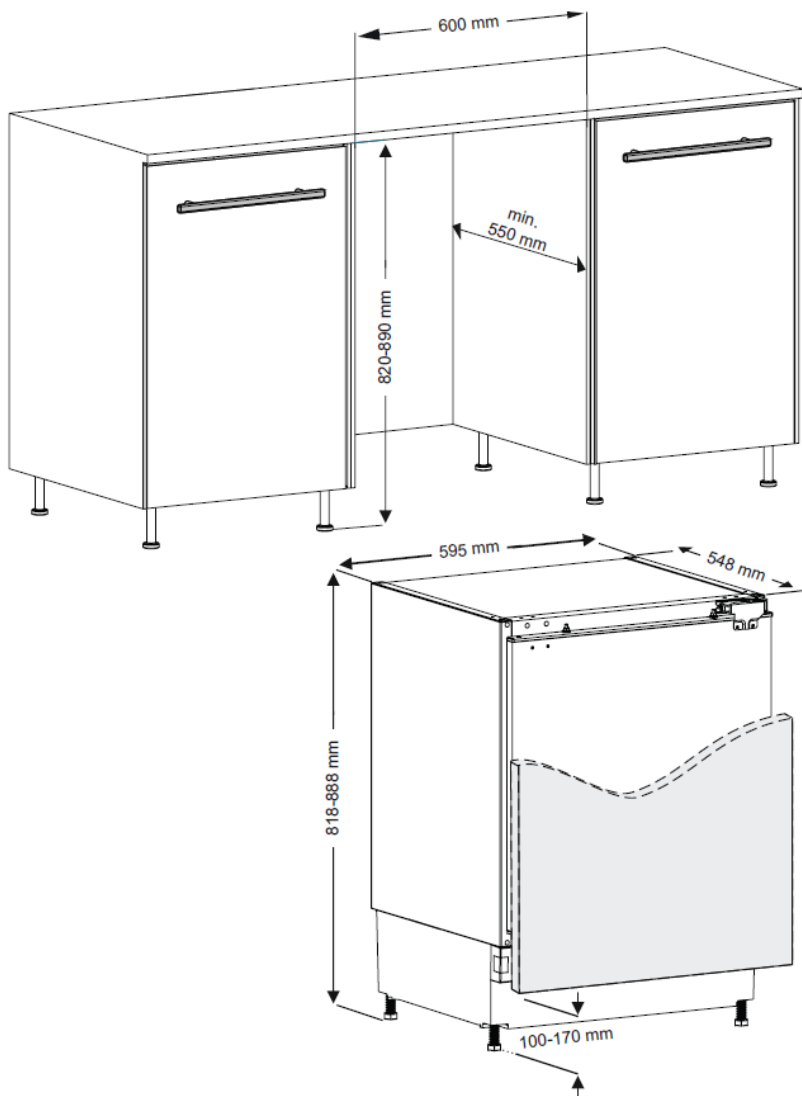

Russell Hobbs

Installation


Adjust the height of the appliance by adjusting the 4 adjustable feet (2 at the rear and 2 at the front). The height can be adjusted from 812mm to 882mm. If needed a spanner can be used to adjust the feet.

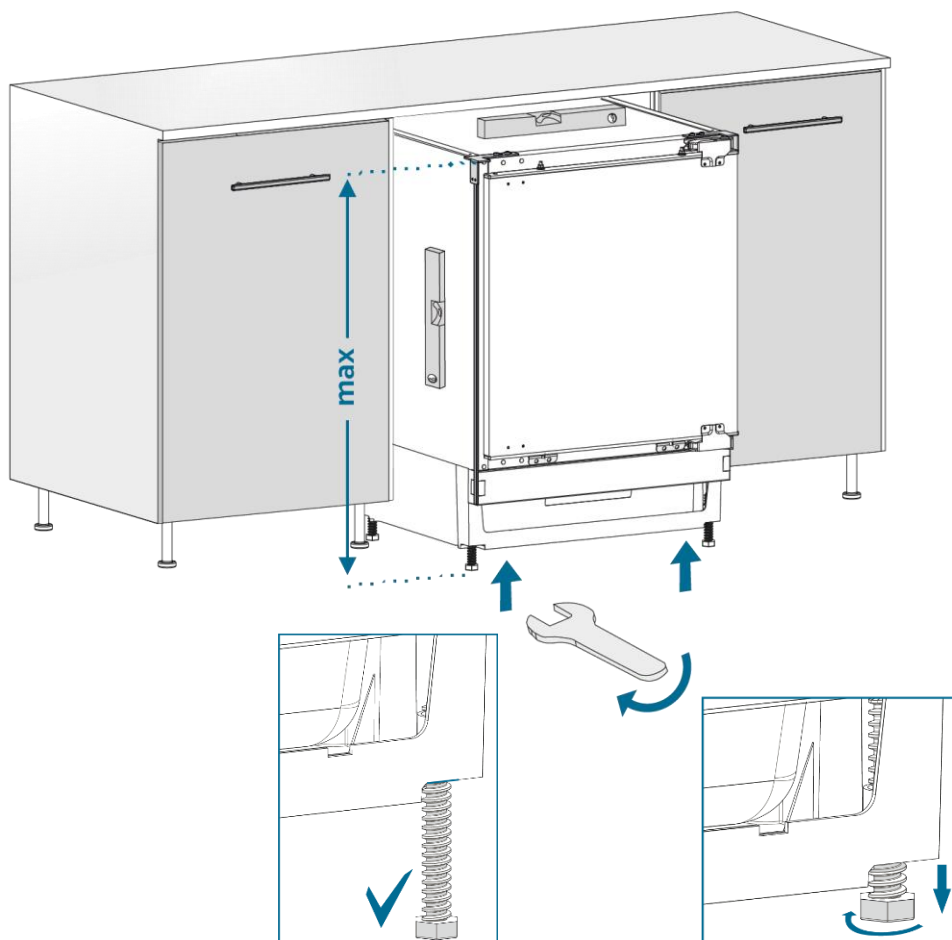


Carefully push the appliance into the housing, ensuring that the cabinet door is able to fully close. If required the feet should be further adjusted.

Installation

Locate the joint cover and on the side of the appliance without the hinges press it between the appliance and the inside of the cabinet wall (start from the bottom and work upwards).




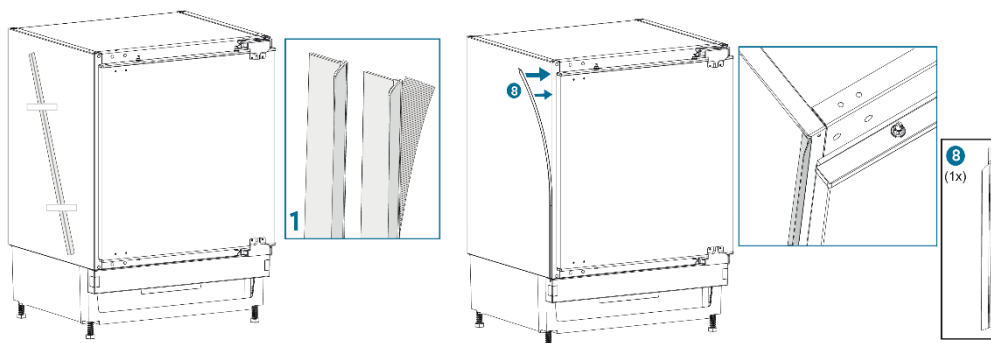


Fix the 2 x L shaped side fixing brackets to top of the appliance cabinet at either side with 4 x torx headed screw (2 in each bracket).

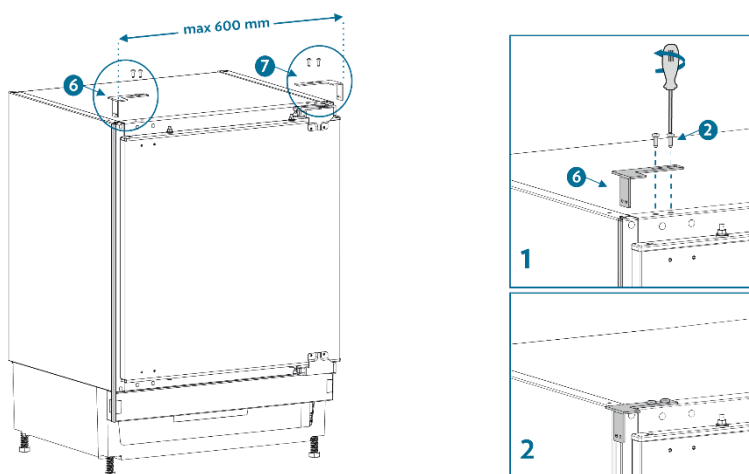

Installation

 Fix the 2 x L shaped door brackets at the bottom of the appliance door on to the cabinet door with 4 x torx headed screw (2 in each bracket). You may need to drill holes in the back of the cabinet door for the screws, if so drill 2 x 2.8mm \varnothing holes to a depth of 10mm

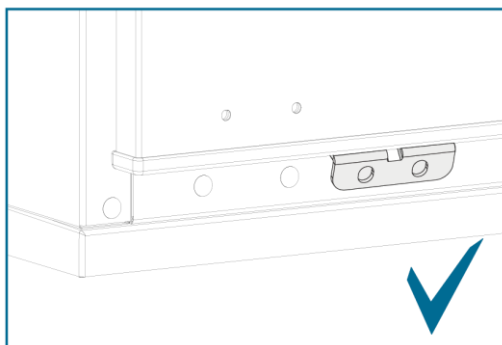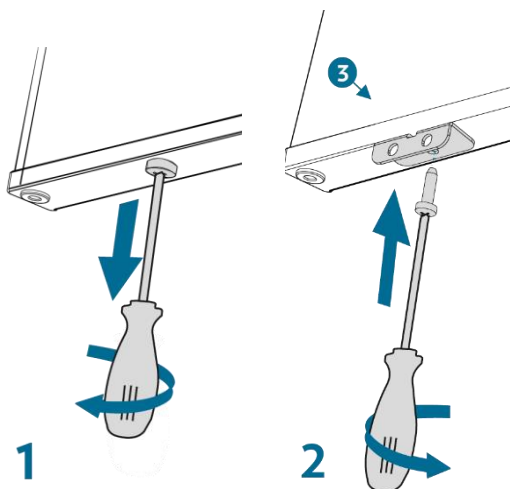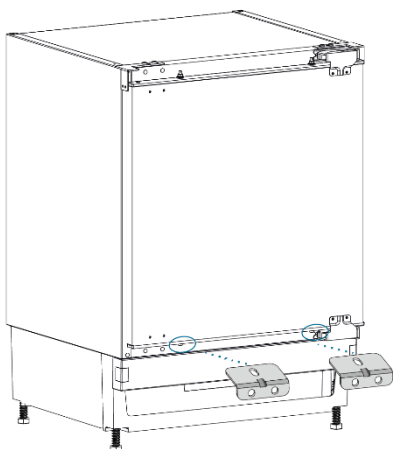


Installation

With the door appliance closed and the appliance situated in the aperture, you will need to:

Measurement A – Measure from the underside of the kitchen unit to the bottom of the bottom of the fixing bracket.



Measurement B - measure from the underside of the kitchen unit to the top of a kitchen cabinet door on a adjacent kitchen unit/door

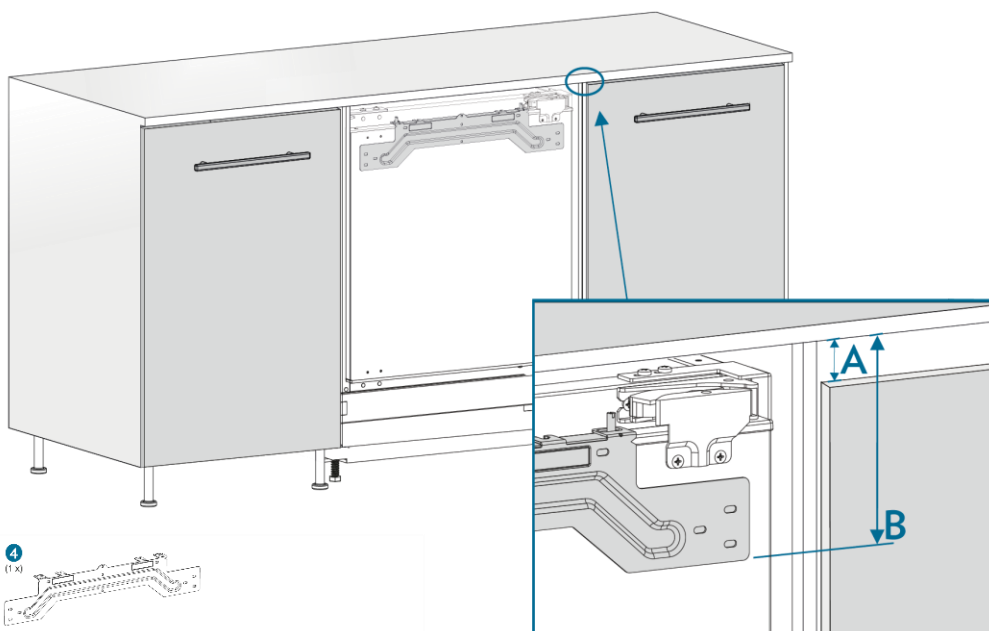

Installation


Remove the nuts and washers that fix the fixing bracket to the appliance door and carefully remove the fixing bracket. **On the back of the cabinet door** (the side that will not be seen) mark a vertical centre line approximately 15cm from the top of the door.

 Subtract measurement A from measurement B and put the fixing bracket in place using this measurement from the top of the cabinet door (you must ensure it is on the back of the cabinet door). The 2 holes in the centre of the fixing bracket must be centralised on the vertical mark put on the back of the cabinet door in the previous step. Fix the fixing bracket into place using the small torx headed screws.

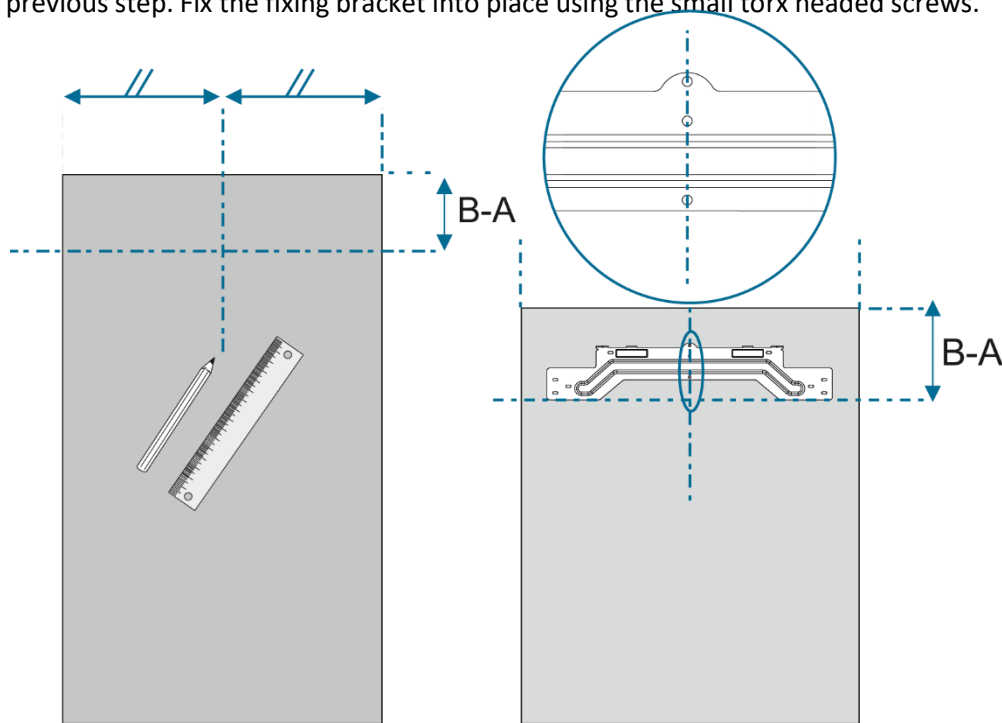


Back of the cabinet door

Installation





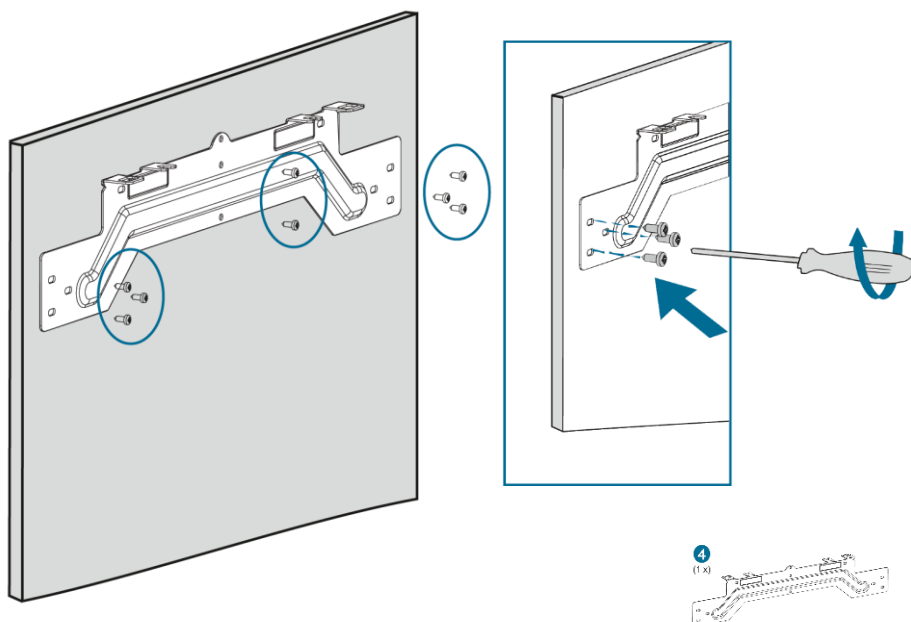


Place the cabinet door with fixing bracket attached on to the top of the appliance door. Fix in to place with the 2 screws that were removed when removing the fixing bracket from the appliance door.

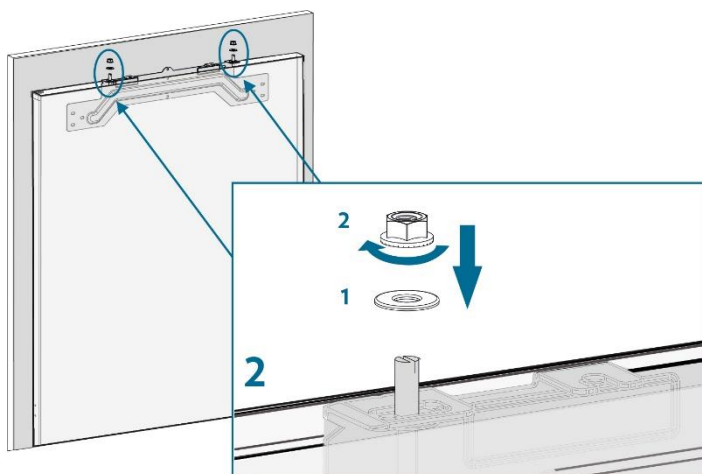


Installation

Align the cabinet door to the adjacent cabinets by using the horizontal adjustment holes on the fixing bracket and the height adjustment screw on the fixing bracket. To adjust the height you will have to loosen the locking nut and adjust the screw with a flat headed screwdriver.

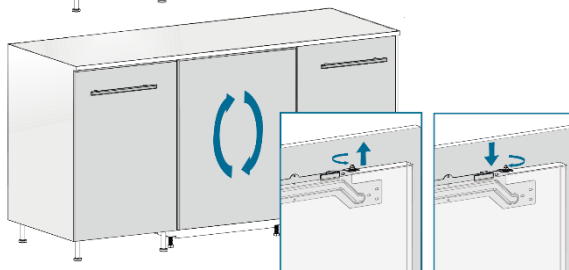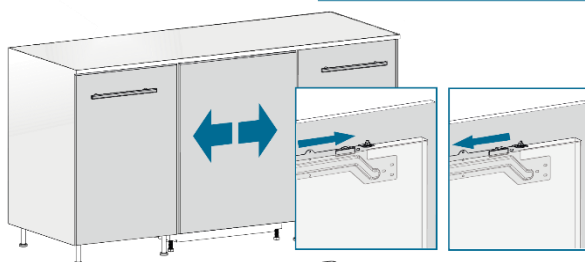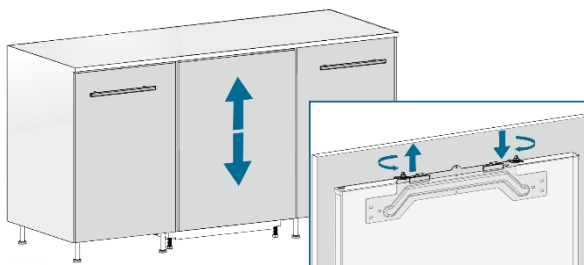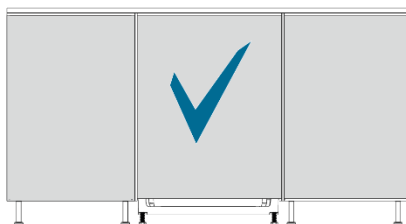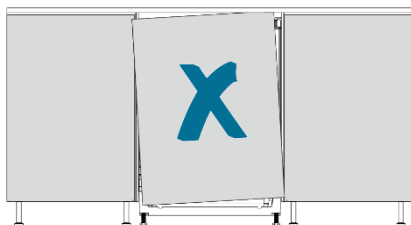


Installation

Fit the decorative cover on to the fixing bracket.

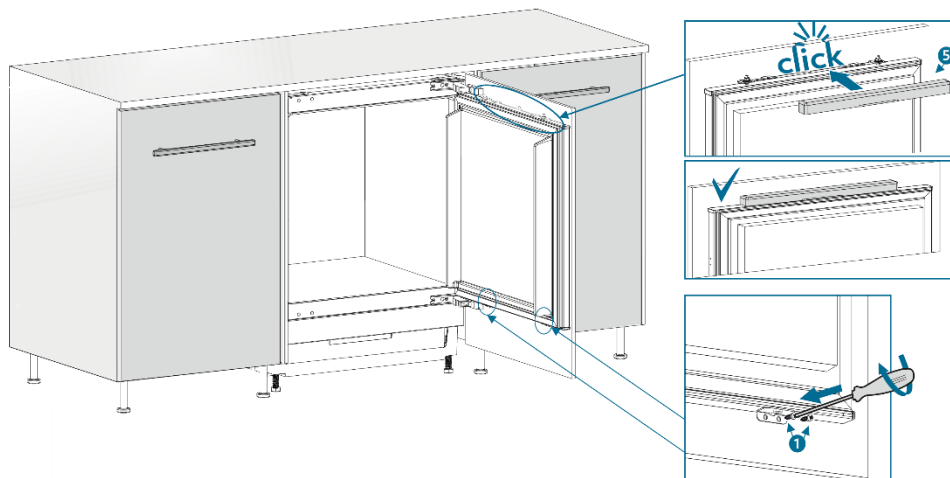

Ensure the cabinet door and the appliance door can open and close fully, before finally tightening all screws. Now fix the appliance to the side cabinet walls with screws. To do this you may need to drill holes in the cabinet sides, if so drill \varnothing 2.8mm holes to a depth of 10mm.

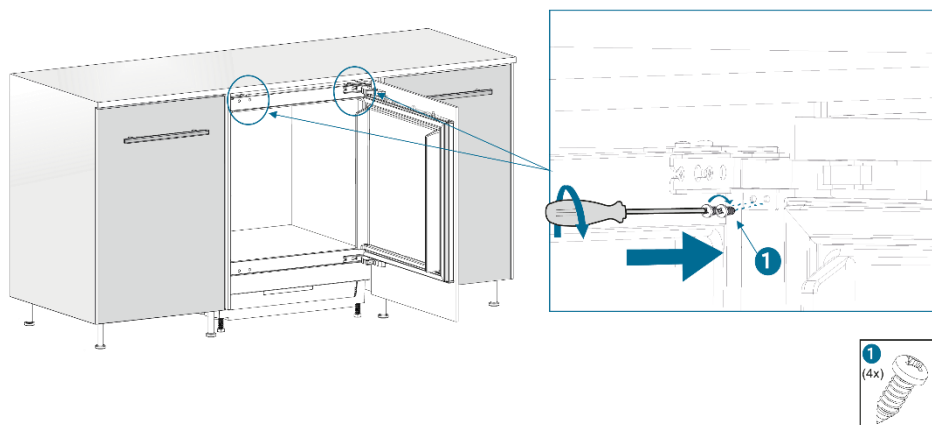

Open the door and fit the hinge covers to the inside of the hinges.


Fitting the plinth

The ventilation grill the appliance has been manufactured with must used, if it isn't or modified then the operation of the appliance could be affected.

The plinth must also be positioned at least 25mm from the appliance door.

If the height of the appliance is 820mm then a plinth that is 90mm in height can be fitted without any modification. However if the height of the plinth is greater than 90mm then a cut out that is 600mm wide and the height of the cut will vary depending on the height of the plinth. If the height of the plinth is 140mm then the height of the cut out should be 50mm.

Once the above has been done fix the plinth in place

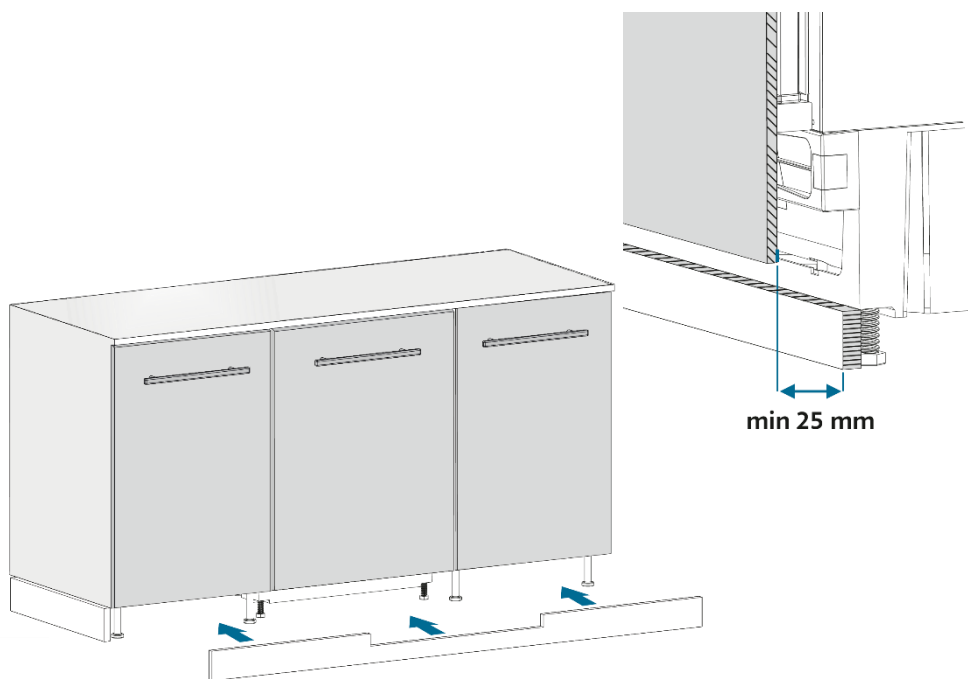


Door Reversal

To reverse the door you will need to tilt the appliance backward to access the lower hinge which holds screws. Do not tilt the appliance more than 45 degrees and do not lay the appliance flat on its side.


For your own safety, a minimum of 2 people should lift or tilt this product.

Tools Required: Torx headed screwdriver, flat headed screwdriver and hexagonal spanner or a socket driver.

1. Remove the 4 screw hole covers on the front of the appliance door at the top and the bottom.

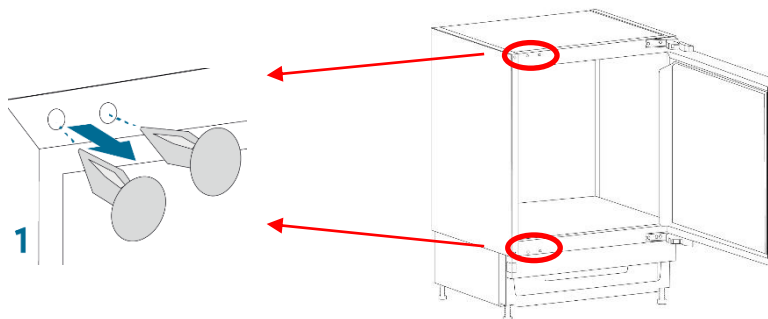


2. With the door closed remove the screws from the top and bottom hinges that hold the appliance door to the hinges. Remove the screws from the top hinge first.

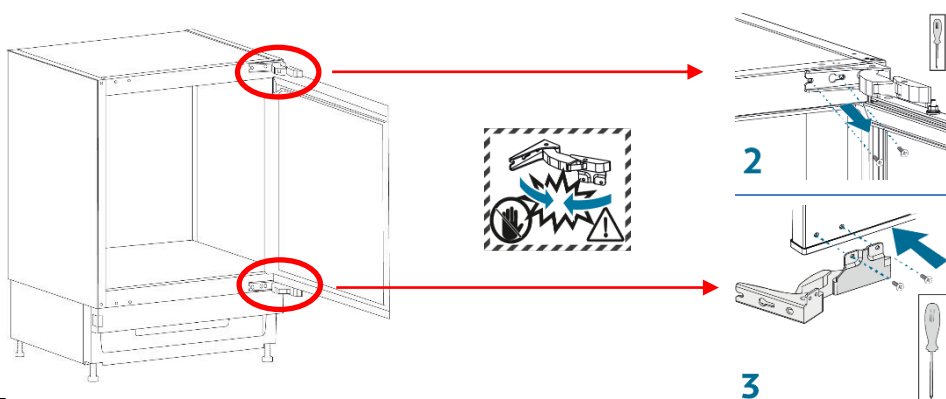

Door Reversal


3. Support the door at the bottom and open the hinges away from the appliance door. Carefully lift the appliance door away, ensuring you don't damage the hinges or the door.
4. Remove the 4 screw hole covers on the cabinet of the appliance at the top and the bottom on the opposite side of where the hinges are currently fixed.
5. With the top hinge open, remove the screws from the top hinge that fix the hinge to the cabinet of the appliance.
6. Flip over the top hinge (by 180°) and fix it in place on the diagonally opposite corner of the appliance cabinet. Repeat the previous step with the bottom hinge and then replace the screw hole covers on the opposite side.

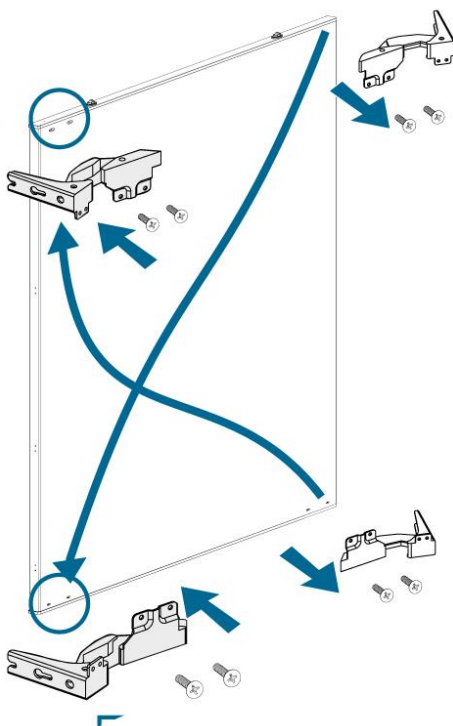


Door Reversal

7. Reattach the door by fixing the outside screws of the hinge to the door.

You must ensure the fridge door is aligned horizontally and vertically, so that the seals are closed on all sides before finally tightening.

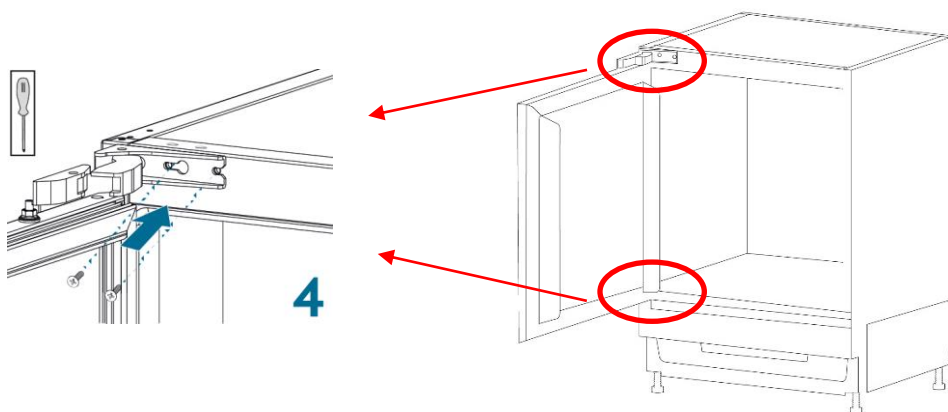


8. Replace the 4 screw hole covers on the cabinet of the appliance at the top and the bottom on the opposite side of where the hinges are now fixed.

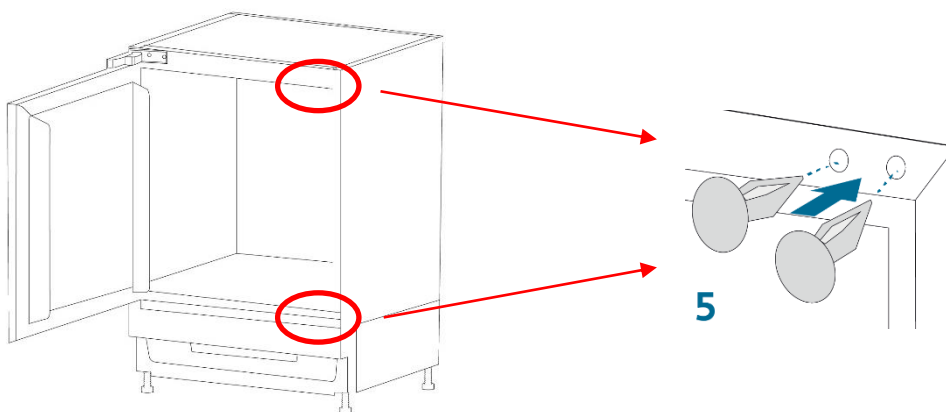

Replacing the Light

The light is an energy efficient, long life LED. Therefore should not need replacing throughout the life of the product however if it does it has to be replaced by a qualified engineer.

Please call the service team on **0345 208 8750**.

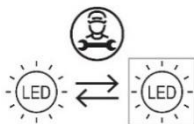

Energy Saving Advice

- Do not install the appliance close to sources of heat, such as a cooker, dishwasher or radiator.
- Locate the appliance in a cool well-ventilated room and make sure that the air vents are clear.
- Try to avoid keeping the doors open for a long time, warm air will enter the cabinet and may cause a build-up of ice as well as affecting the energy consumption. Ensure there are no obstructions preventing the doors from closing properly.
- Ensure that the door seals are clean and there are no tears or splits.
- Keep the most perishable foods, (those with a short shelf-life, such as cooked meats), in the coldest part of the fridge. The Salad Crisper Box is the warmest part of your fridge and should be used for vegetables, salads and fruits etc.
- Do not overload the appliance: the cooling air that circulates to keep the appliance cold gets blocked and pockets of warm air form.
- Do not put hot food into the fridge – let it cool down first.
- The shelves are placed in factory mode this delivers the most energy efficient usage for this appliance.

Food Storage Guidelines

| Refrigerator compartments | Type of food |
|--|---|
| Door or balconies of fridge compartment | Foods with natural preservatives, such as jams, juices, drinks, condiments. Do not store perishable foods. |
| Crisper drawer (salad drawer) | Fruits, herbs and vegetables should be placed separately in the crisper bin. Do not store bananas, onions, potatoes, garlic in the refrigerator. |
| Fridge shelf – bottom Chiller (box/drawer) | Raw meat, poultry, fish (for short-term storage) |
| Fridge shelf – middle | Dairy products, eggs |
| Fridge shelf – top | Foods that do not need cooking, such as ready-to-eat foods, deli meats, leftovers. |



Maintenance & Cleaning

Disconnect the appliance from the power supply before cleaning.

Internal Cleaning

- Do not pour water over the appliance.
- The cavity should be cleaned periodically using a solution of bicarbonate of soda and lukewarm water (5ml to 0.5 litre of water)
- Clean the accessories separately with soap and water. Do not put them in the dishwasher.
- Do not use abrasive products, detergents or soaps.
- After washing, rinse with clean water and dry carefully.
- When you have finished cleaning reconnect the plug with **dry hands**.

External Cleaning

- Wash the outer cabinet with warm soapy water. Do NOT use abrasive products.
- There are sharp edges on the underside of the product so care should be taken when cleaning.
- Once or twice a year dust the rear of the appliance and the compressor at the back of the appliance, with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause increased energy consumption.

When the appliance is not in use

When the appliance is not in use for long periods, disconnect from the electricity supply, empty all of the food and clean the inside. Leave the door open to prevent the build-up of odours.

Trouble shooting

| Problem | Solution |
|---|---|
| The fridge doesn't work | Check that the appliance is switched on. |
| | Check that there has not been a power cut. |
| | Check that the plug is not faulty. |
| | Check that the fuse has not blown. |
| | Check that the voltage is correct for the appliance. |
| | Are there any faults with the socket? For this purpose, try the plug of your appliance by connecting it to a socket which you are sure is working. |
| The temperature inside the appliance is not cold enough | Check that there is not too much food in the appliance. |
| | Check that the thermostat is set to a suitable temperature/setting. |
| | Check that the appliance is not placed in direct sunlight, or too near to a heating source. |
| | Check that the ambient temperature is within the operation limits of the appliance. |
| | Are the doors of the appliance opened frequently? Once the door is opened, the humidity found in the air in the room enters the appliance, especially if the humidity levels in the room are very high. The more frequently the door is opened in humid conditions the more chance of the build up of moisture. |
| The temperature within the appliance is too cold. | Increase the working temperature by adjusting the thermostat to a lower setting. |
| | The highest setting should only be used as a rapid cool setting and should only be set 2 hours before a large amount of food is placed in the fridge. If this is not done the temperature in the fridge compartment could fall below 0°C as the compressor will run continuously. |
| The inner surfaces of the appliance are wet | Caused by condensation - dry the inside of the appliance. |
| The outer surfaces of the appliance are wet | Caused by condensation - dry the outer of the appliance carefully. |



Russell Hobbs

Trouble shooting

| Problem | Solution |
|---------------------------------|--|
| Smell/odour | Check all the food and drink that is in the fridge is in date and correctly packaged. If it isn't then it should be removed immediately or repackaged. |
| | Check for spillages on each shelf, rack and drawer. You may need to remove the drawers to check that no spillages have settled underneath them. As spillages that have not been cleaned and have been left can cause smells and unwanted odours. |
| | Check the drainage pipe is not clogged or the drip tray at the back of the appliance is full. The pipe can be cleared by pouring hot water through, but you must ensure the appliance is turned off, the plug is removed from the socket and a jug or bucket is in place to catch the flow of water. |
| The doors do not close properly | Ensure there are no obstructions preventing door closure. |
| | Check the door compartments and shelves are correctly in place. |
| | Check the door seal is not warped or torn. |
| | Check the appliance is level. |
| Unusual noises | Check that the appliance is on a flat, level surface and is stable. |
| | Check the spacing's around the appliance and ensure it is not touching other items. |
| | Bubbling and gurgling sound: • This noise is emitted as the coolant fluid flows through the pipes within the system. This is normal. |
| | Water flowing sound: • This is the normal sound of water flowing into the drain trough during the defrosting process. |
| | If the appliance is operating noisily (compressor noise): This is normal. This noise indicates that the compressor is operating normally. As the compressor is being energized, it might run a bit more noisily for a short period of time. |



Russell Hobbs

Connection to the Mains Supply

WARNING- THIS APPLIANCE MUST BE EARTHED

This appliance is designed to operate from a mains supply of AC220V - 240V; 50HZ. Check that the voltage marked on the product corresponds with your supply voltage.

For UK use only – Plug fitting details (where applicable):

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:


The GREEN/YELLOW wire is the EARTH and must be connected to the terminal which is marked with the letter E or by the earth symbol or coloured GREEN or GREEN/YELLOW.

The BLUE wire is the NEUTRAL and must be connected to the terminal marked with the letter N or coloured BLACK.

The BROWN wire is the LIVE wire and must be connected to the terminal marked with the letter L or coloured RED.

Always ensure that the plug cord grip is fastened correctly.

If a 13A (BS1363) fused plug is used it must be fitted with a 13amp fuse conforming to BS1362 and be BSI or ASTA approved.

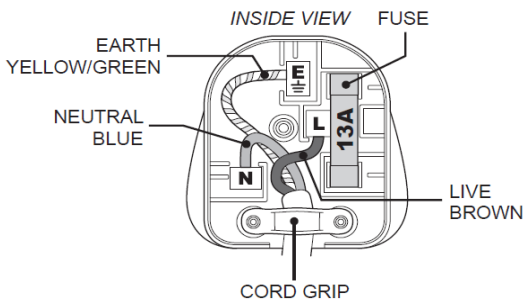

Guarantee

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship you must contact Product Care with the original proof of purchase so a replacement or refund can be arranged.

Refund or replacement is at the discretion of Product Care.

The following conditions apply:

- Product Care will require a valid proof of purchase at the point of replacement or refund.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which has been supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.

This does not affect your statutory rights.

| Region | Contact | Website |
|-----------------------|-----------------------------|---|
| UK & Northern Ireland | 0345 209 7461 | mda.russellhobbs.com |
| Ireland | 1 800 938982 | ie.mda.russellhobbs.com |
| Rest of Europe | europe@productcaregroup.com | de.mda.russellhobbs.com fr.mda.russellhobbs.com es.mda.russellhobbs.com it.mda.russellhobbs.com nl.mda.russellhobbs.com |

Technical Specification

| | |
|----------------------------|-------------------------------|
| Model number | RH82IUCLF1E1W |
| Rated Voltage | 220V – 240V ~ 50Hz |
| Capacity | 134L |
| External Dimensions(HxWxD) | 818mm - 888mm x 595mm x 548mm |

| Class | Symbol | Ambient temperature range (°C) | Information |
|--------------------|--------|--------------------------------|---|
| Extended temperate | SN | +10 to +32 | Extended temperate: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 10°C to 32°C; |
| Temperate | N | +16 to +32 | Temperate: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16°C to 32°C; |
| Subtropical | ST | +16 to + 38 | Subtropical: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16°C to 38°C; |
| Tropical | T | +16 to+ 43 | Tropical: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16°C to 43°C; |

Product Fiche

| | | | | | | |
|--|-----|--|--|--|---|-------|
| Supplier's name or Trade Mark: | | Russell Hobbs | | | | |
| Supplier's Address: | | Unit 1, Green Bank Business Park, Wigan, WN2 4AY / PCT (NI) Ltd, Belfast, BT5 5AD. | | | | |
| Model Identifier: | | RH82IUCLF1E1W | | | | |
| Product Type | | Fridge | | | | |
| | | Value | | Value | | |
| Total Volume (L) | 134 | Dimensions (cm) | Height | 81.8-88.8 | | |
| | | | Width | 59.5 | | |
| | | | Depth | 54.8 | | |
| Net Weight (kg) | | 28.5 | | | | |
| Rated Voltage | | AC220V-240V / 50Hz | | Rated Current | | 0.38A |
| EEI | | 100 | | Energy Efficiency Rating | | E |
| Airborne acoustical noise emissions (dB) | | 100 | | Airborne acoustical noise emission class | | C |
| Annual Energy Consumption (kWh/a) | | 93 | | Climate Class | | SN |
| *Actual consumption may vary depending on how the appliance is used | | | | | | |
| Minimum ambient temperature (°C) for which the refrigerating appliance is suitable | | 10°C | | Maximum ambient temperature (°C) for which the refrigerating appliance is suitable | | 32°C |
| Winter Setting | | No | | | | |
| Compartment Type | | Compartment Parameters and Values | | | | |
| | | Compartment Volume (L) | Recommended temperature setting for optimised food storage (°C) These settings shall not contradict the storage conditions set out in Annex IV, Table 3 | Freezing capacity (kg/24 h) | Defrosting type (Automatic / Manual / Static) | |
| Pantry | No | N/A | +17 | N/A | N/A | |
| Wine Storage | No | N/A | +12 | N/A | N/A | |
| Cellar | No | N/A | +12 | N/A | N/A | |
| Fresh Food | Yes | 134.3 | +4 | N/A | Automatic | |
| Chill | No | N/A | +2 | N/A | N/A | |
| 0 Star or Ice Maker | No | N/A | 0 | N/A | N/A | |
| 1 Star | No | N/A | -6 | N/A | N/A | |
| 2 Star | No | N/A | -12 | N/A | N/A | |
| 3 Star | No | N/A | -18 | N/A | N/A | |
| 4 Star | No | 31 | -18 | N/A | N/A | |
| 2 Star Section | No | N/A | -12 | N/A | N/A | |
| Variable Temperature Compartment | No | N/A | -18 | N/A | N/A | |
| Light Source Parameters (for models with an LED lamp) | | | | | | |
| Type of Light Source | | LED | For 4-Star Compartments | | | |
| Energy Efficiency Class | | E | Fast Freeze | | No | |
| Low Noise Appliance | | No | Design Type | | Built-In | |
| Wine Storage Appliance | | No | Other Refrigerating Appliance | | Yes | |
| Minimum duration of the guarantee offered by the supplier: | | | 12 months | | | |
| Weblink to the manufacturer's website, where the information in point 4(a) Annex of Commission Regulation (EU) 2019/2019 (1) (b) is found: | | | mda.russellhobbs.com | | | |

Notes





Russell Hobbs

Made by Product Care Trading Limited under license from Spectrum Brands (UK) Limited. Product Care Trading Ltd, Unit 1, Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom

Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland. Russell Hobbs is the registered trademark of Spectrum Brands (UK) Ltd.

**UK
CA**



The 'wheellie bin' symbol is known as the 'Crossed-out wheellie bin Symbol'.

When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit www.sedex.org.uk for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.

Revision 1.5